

WASP 4G/LTE Datalogger

User Manual

Updated: May, 2021



Contents

1	Introduction.....	4
2	Overview of Operation.....	5
3	WASP Datalogger	6
4	Compatible Sensors	7
5	Sensor and WASP Connection.....	8
5.1	TE Connectivity (Measurement Specialties / Celesco) String Potentiometer, model SP3	8
5.2	TE Connectivity (Measurement Specialties / Celesco) String Pot, model SPD	8
5.3	Sisgeo's MEMS Tiltmeters.....	9
5.4	Sisgeo's Piezo-Resistive Piezometer.....	10
5.5	Vaisala WXT-536 Ultrasonic Weather Station.....	10
5.6	Generic 4-20 mA Sensors, Up to 3.....	10
5.7	Generic 0-10V Sensor.....	10
5.8	Standalone Thermistor	10
5.9	General Notes on bare wire Sensor Connection.....	11
6	Installing the WASP	11
6.1	Mounting the WASP	12
6.2	WASP Positioning General Guidelines	12
7	Confirming 4G LTE Signal Strength.....	12
7.1	Using the WASP Push Button Activation System	12
7.2	Using a Smartphone to Check Installation	16
8	WASP Management Portal Website	17
8.1	Configuration Site.....	18
8.1.1	“SITES” Tab	18
8.1.2	“CONFIG SENSORS” - DETAILED INSTRUCTIONS.....	20
	Native Inputs (Analogue, 4-20mA or Temp/Thermistor), System (Batt, Ontime, Pic, Sig).....	20
	Expander Modules.....	23
	Sensors – Add a Vaisala WXT536	24
	Calculated Inputs (virtual sensors).....	25
8.1.3	“GROUPS” Tab	25
8.1.4	“USERS” Tab	26
8.1.5	“MAP VIEW” Tab.....	27
8.1.6	“SETTINGS” Tab.....	28

8.2	Data Display Site.....	29
8.2.1	“GRAPHS” Tab.....	30
8.2.2	“REPORTS” Tab.....	30
9	Battery Life.....	31
10	Retired Sensors Wiring.....	31
10.1	Sisgeo's MEMS Tiltmeter.....	31
10.2	Sisgeo's Electrical Crackmeter.....	32
10.3	Soil Instrument's Solid State Piezometer.....	32
10.4	Soil Instrument's Solid State Piezometer.....	Error! Bookmark not defined.
10.5	Specto 2GIG Biaxial MEMS Tiltmeter.....	33

1 Introduction

The WASP datalogger is a compact rugged waterproof data logger, containing an internal battery pack & SIM card. It can connect to many different types of meters and sensors. Below are some of the features of this powerful yet simple datalogger:



Beautifully Simple

Simple to install. No on-site concentrator or software required.



Graphs & Reports

Simple website data analysis and system management



Email & SMS Alarms

sent via email or text message



3+ Year Battery Life

The internal lithium batteries will last for 3 years!



Global Coverage

Install the device anywhere with GSM mobile phone coverage



Group Management

Manage large numbers of devices with group management and maps

2 Overview of Operation

The WASP is designed for quick deployment in the field with minimum requirement on time, tools and skill as illustrated by the work flow below:

❖ Before you go to site:

- a. Take note of the WASP's serial number - Each WASP is assigned with an unique serial number, such as OP12345.
- b. Take note of the sensor's type and serial number.

❖ When you are in the field:

- a. Install sensor
- b. Connect sensor to WASP - see Section 5
- c. Install WASP - see Section 6
- d. Activate WASP with TEST button and confirm 4G LTE signal strength - see Section 7

❖ After returning from site:

- a. Log on to WASP's web portal www.spectotechnology.com/wasp to configure logging frequency, uploading frequency and charts and alarms as necessary - see Section 8
- b. Start monitoring

3 WASP Datalogger

All Standard WASP models include a 4G/LTE modem module and external antenna for communications. This user guide covers the below listed datalogger models.

WASP Models:

- WASP-LTE WASP datalogger with 4G-LTE modem
- WASP-LTE-RC WASP datalogger with 4G modem and rechargeable battery
(for use with Vaisala weather station)

Additional Expanders:

- WASP-ACC-EXP-2M0.3A Expander for WASP, 2-ch, to read 2x mA inputs
- WASP-ACC-EXP-L0.3AAO Expander for WASP to read a 2x mA and 1x thermistor (e.g., Sisgeo TM)
- WASP-ACC-EXP-M0.3V Expander for WASP, 1-ch, to read Voltage input (0-5V)

Wiring details for analogue WASP loggers are as follows:

WASP-LTE



WASP-ACC-EXP-2M0.3A

Cable Label	M12 Pinout	Wire Color
1	Pin 1 = Power	Brown
	Pin 3 = 4-20mA	Blue
2	Pin 1 = Power	Brown
	Pin 3 = 4-20mA	Blue

WASP-ACC-EXP-L0.3AAO

Cable Label	M12 Pinout	Wire Color
AA	Power	Red
	4-20mA	Blue
	Power	Red
	4-20mA	Yellow
	Therm +	White
	Them -	Green

WASP-ACC-EXP-M0.3V






Cable Label	M12 Pinout	Wire Color
MV	Pin 1 = Power	Brown
	Pin 3 = 0-5V	Blue

4 Compatible Sensors

The WASP works with 4-20mA current loop sensors and their built-in 3KΩ resistance thermistor sensors.

The 4-20mA current loop has been widely used in the industrial and process sectors as well as in the geotechnical field. Its popularity comes from its ease of use and its performance. A big benefit of the current loop is its simple wiring (only two wires required). The supply voltage and measuring current are supplied over the same two wires. Zero offset of the base current (ie. 4mA) makes cable break detection simple. In addition, the current signal is immune to any stray electrical interference, and a current signal can be transmitted over long distances.

This user guide covers the 4-20mA sensors shown below.

Sensor Type	Sensor Manufacturer	Description	Image
Piezometer	Sisgeo	Piezo-resistive Piezometer 4-20mA output	
Tiltmeter	Sisgeo	MEMS Tiltmeter 4-20mA output (uniaxial/biaxial with thermistor)	
Crackmeter	Sisgeo	Electrical Crackmeter 4-20mA output (with optional thermistor)	
Crackmeter	Measurement Specialties	String Potentiometer 4-20mA output	
Weather Station	Vaisala (WXT536)	Ultrasonic Weather station; Wind, Precipitation, Temperature, Humidity, Barometric Pressure Digital Output	

5 Sensor and WASP Connection

The WASP 4G uses a field wirable M12 connector. The generic sensor wiring is as follows:



WASP 4G supports measuring one 4-20mA sensor natively. To read more than one sensor, digital expander modules are used. In general, the expanders all follow the basic wiring pattern above;

Power = Pin1,

Ground = Pin 4,

when applicable Analog sensors (4-20mA, 0-5V, 10K) = Pin3,

Digital SDI = Pin2.

Specific sensor wiring and expander combinations for common sensors are provided in the below tables.


5.1 TE Connectivity (Measurement Specialties / Celesco) String Potentiometer, model SP3

Terminal Name	Color of Wire	
	WASP	SP3 - String Pot. with mA output
Power	Pin 1	Red
Return	Pin 3	Black
Shield	-	-

5.2 TE Connectivity (Measurement Specialties / Celesco) String Pot, model SPD

Terminal Name	Color of Wire		Pin Designation SPD supplied connector
	WASP	SPD - Cordset cable	
Power	Pin 1	Brown	Pin #1
Return	Pin 3	Black	Pin #4
Shield	-	-	

field installable connector (included)

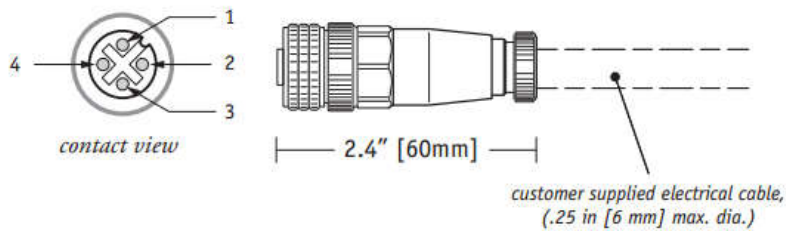



5.3 Sisgeo's MEMS Tiltmeters

Expander: ACC-EXP-LAAO


○ Uniaxial Tiltmeter

Terminal Name	Color of Wire	
	WASP - ACC-EXP-LAAO	MEMS Tilt Meter
Power	Pin 1	Red
Return	Pin 3	Black
Shield	-	-
Thermistor	Red	White
Thermistor	Blue	Green

○ Biaxial Tiltmeter

Terminal Name	Color of Wire			
	ACC-EXP-LAAO	MEMS Tilt Meter v1 	MEMS Tilt Meter v2 	
			M12 Color	M12 Pin
Power (A in-out)	Red	Red	White	1
Return (A in-out)	Blue	Black	Yellow	4
Power (B side-side)	Red	White	Black	5
Return (B side-side)	Yellow	Green	Pink	6
Thermistor	White	Yellow	Brown	2
Thermistor	Green	Blue	Green	3

FEMALE CONNECTOR:

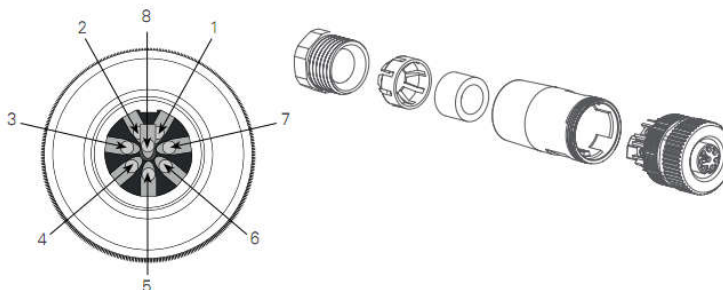

5.4 Sisgeo's Piezo-Resistive Piezometer

Terminal Name	Color of Wire	
	WASP	Electrical Piezometer
Power	Pin 1	Red
Return	Pin 3	Black
Shield	-	-

5.5 Vaisala WXT-536 Ultrasonic Weather Station

Terminal Name	Color of Wire	
	WASP-LTE-RC	WXT-536 Cable
Permanent Power	Pin 1	Brown
SDI12	Pin 2	White and Blue
Shield/Screen	Pin 4	Red and Green

**Vaisala is compatible with WASP-LTE-RC only. External power supply recommended.*

5.6 Generic 4-20 mA Sensors, Up to 3

Terminal Name	Color of Wire		
	WASP - ACC-EXP-2MO.3A	WASP	4-20 mA Sensors
Power 1	Pin 1	-	Sensor 1 V+
Return 1	Pin 3	-	Sensor 1 Signal
Power 2	Pin 1	-	Sensor 2 V+
Return 2	Pin 2	-	Sensor 2 Signal
Power 3	-	Pin 1	Sensor 3 V+
Return 3	-	Pin 3	Sensor 3 Signal

5.7 Generic 0-10V Sensor

Terminal Name	Color of Wire	
	WASP - ACC-EXP-MO.2V	0-10V Sensor
Power	Pin 1	V+
Ground	Pin 3	V-

5.8 Standalone Thermistor


Terminal Name	Color of Wire	
	WASP	Thermistor

Power	Pin 3	Either (Polarity does not matter)
Return	Pin 4	
Shield	-	-

5.9 General Notes on bare wire Sensor Connection

The cable from the WASP has an overmolded M12 connector to ensure easy connectivity and to prevent water ingress. Wherever possible, use a matching M12 connector to connect your sensor cable to the WASP connector. However, in the event that using the connectors is not possible and you need to splice bare wires, a high-quality seal must be made as

1. The cable from the WASP has an overmolded M12 connector to ensure easy connectivity and to prevent water ingress. Wherever possible, use a matching M12 connector to connect your sensor cable to the WASP connector. However, in the event that using the connectors is not possible and you need to splice bare wires, a high-quality seal must be made as it is extremely important to ensure that no moisture can get into the cable join between the WASP cable and sensor cable. If moisture enters the cable join, the join will rust over time and will cause the mA signal from the sensor to stop being registered. Water can in some cases travel up the cable core into the logger or the sensor and damage the internal circuitry.
2. The "3M ScotchLok UY2 Insulation Displacement Wire Connectors" and crimper are recommended for splicing the signal cables together. Once the splice is made and checked, the cable join area must be made water tight using self-fusing tape.

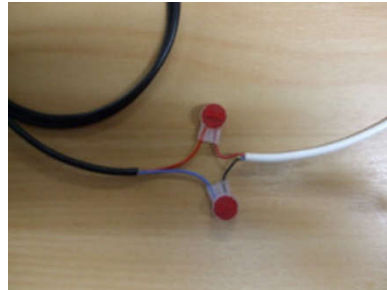

6 Installing the WASP

Placement of the WASP is important to ensure adequate 4G LTE signal strength is available. Poor 4G LTE signal strength may cause the WASP to make more attempts than normally required to contact the website and therefore exhaust the internal batteries more quickly. It can also cause a delay in sensor readings being transferred to the website.

Poor signal starts to affect battery life at around 30% 4G LTE signal strength, and generally will be too low for normal operation at less than 20% signal strength.

If a WASP is left installed in an area with poor signal strength expect to see the unit appearing "offline" from time to time, and the website battery gauge to show a higher than normal battery drain rate.

Very poor 4G LTE signal strength can result in the WASP device lasting less time than the rated battery life, or not connecting at all.

6.1 Mounting the WASP

The WASP can be mounted to the wall using two 5mm diameter screws through the two mounting holes on the two corners of the main body. The distance between the screw holes is 98mm.

Alternatively, the WASP may be strapped to a pole using a hose clamp across the center of the body.

6.2 WASP Positioning General Guidelines

- Do not install inside a metal cabinet
- Avoid installing inside metal room, basement or room with concrete walls
- If possible, elevate as much as possible, installation in pits or underground not recommended. (While this is not strictly recommended, if signal strength in the area is strong, it is possible that data may be transmitted to the web, through the manhole or roadbox lid. Testing on site will confirm if this is possible)

If sufficient signal can't be obtained at or near the desired site consider using a larger external antenna (like a manhole antenna) to improve signal performance.

7 Confirming 4G LTE Signal Strength




Once a suitable installation position has been identified there are several tools available for the installer to confirm the 4G LTE signal strength is sufficient and also that attached meters & sensors are functioning normally:

- Push button activation with light feedback - covered in Section 7.1
- Smartphone mobile web app - covered in Section 7.2
- Normal PC based web-browser - covered in Section 8

7.1 Using the WASP Push Button Activation System

By pressing the TEST button, the WASP can be forced to attempt an immediate connection to the website. A successful connection will validate the 4G LTE coverage at the chosen installation location and also upload details of signal strength and recorded sensor data to the website. The installer may view the results of the signal strength by using the smartphone App. (see next section).

In order to activate the 4G LTE connection, complete the following steps:

a	Press the TEST button as shown in the figure to the right.	
b	When holding the button in this position, the LED light will flash BLUE . Continue to hold the button until BLUE LED becomes solid. The WASP will now be in “Active Mode”.	
c	Release the button and wait for the WASP to make a successful connection to the website (indicated by the LED light turning GREEN).	

Attempting Connection

After pressing the TEST button on the label, the LED light will flash **BLUE**. The TEST button must be held until the light goes from flashing to solid (after about 5 x flashes). The WASP is now in “Active” mode. The **BLUE** LED will be solid for several seconds before turning off.

The WASP will now attempt to connect to the website (indicated by a flashing **BLUE** LED light) by connecting to the local 4G LTE cell-phone tower and transferring data to the website. This process typically takes 30-60 seconds, but may take up to several minutes. The process may take longer if:

- i. The unit has recently been transported from a different country or region. In this case it may be attempting to find the correct 4G LTE operator

- ii. The unit has a lot of data to upload from the internal memory

Successful Connection

Once successful connection is made, the LED light will turn **GREEN** (and hold steady for several seconds).

Failed Connection

Upon a failed connection to the website, the LED light will turn **RED**. Failure to connect could be the result of the following problems:

- i. Unit has not yet identified a cell-tower to connect to – this can occur the first time a unit is activated.
- ii. Insufficient Signal strength - there may not be enough signal for a full 4G LTE connection. Try to move unit to a higher or more open location.
- iii. Temporary 4G LTE network problem. Test the 4G LTE network with your smart phone (in the USA: AT&T & T-Mobile), if it's OK then retry with the WASP.
- iv. Damaged WASP unit. The unit has been damaged since last used. Check connections to meters/sensors have not mistakenly fed high voltages into WASP device.

The following table describes the reasons for various light signals:


Number of RED Flashes	Meaning	Duration	Likely Causes
1	No SIM card present	Till modem sleeps (120s)	no SIM
2	Failed Network Registration	Till modem sleeps (120s)	no signal
3	Failed Network Connection	For 10 secs	Can't connect to server
5	I2C bus error	For 10 secs	I2C peripheral bus not working
6	Failed Response from OutpostCentral.com (send data but did not receive the OUTPOSTOK string)	For 10 secs	Can't upload first packet, did not receive ack from server (1st packet only since UBA can do partial upload in low signal conditions)
7	This error indicates that the device has failed to connect to the network 5 or more times.	For 10 secs	

PLEASE NOTE:

If connection is unsuccessful, you may need to retry the push button activation several times. Especially if it is the first time you are activating the WASP.

7.2 Using a Smartphone to Check Installation

Use a smartphone to get immediate feedback on the status of the WASP installation by navigating to and clicking on the “Go To Mobile Version” button.

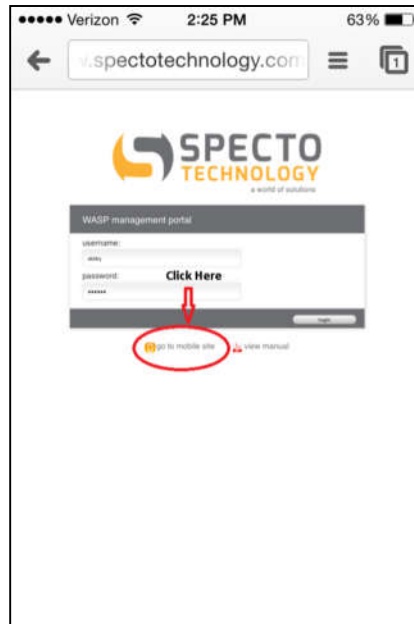


You will then be directed to the Outpost Central mobile login screen. Login and select the WASP you would like to check the signal of as shown below:




1. Login



2. Select WASP

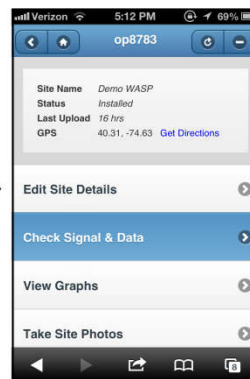

3. Check Signal

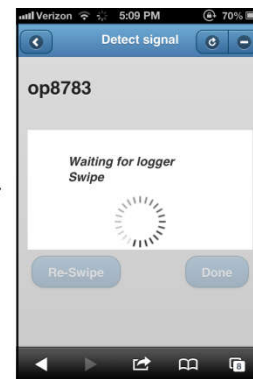

4. Activate WASP with TEST

Once you get to Step #4, activate the WASP by pressing the TEST button over the label to force a connection to the web. Once the WASP connects to the website, the signal strength is shown in the mobile app. The latest sensor readings are available to view from the full website.

The full WASP website portal may also be accessed on smartphones by logging into www.spectotechnology.com/wasp in the normal way (without selecting the Mobile Version option).


8 WASP Management Portal Website

All the WASP's settings and controls are accessible through wireless communication over the Internet from the WASP Management Portal. The web address of the Management Portal is:

<http://www.spectotechnology.com/wasp>

The website is used to program the WASP's reading schedule and method. It may also be used to display data graphically, generate reports and send automated alert emails in case of a sensor exceeding a predetermined threshold. Data may also be pushed to an external ftp site for import into the user's choice of display software (e.g. eagle.io, VDV, etc.).

When you open the above web address with an Internet browser, you will see the screen below:

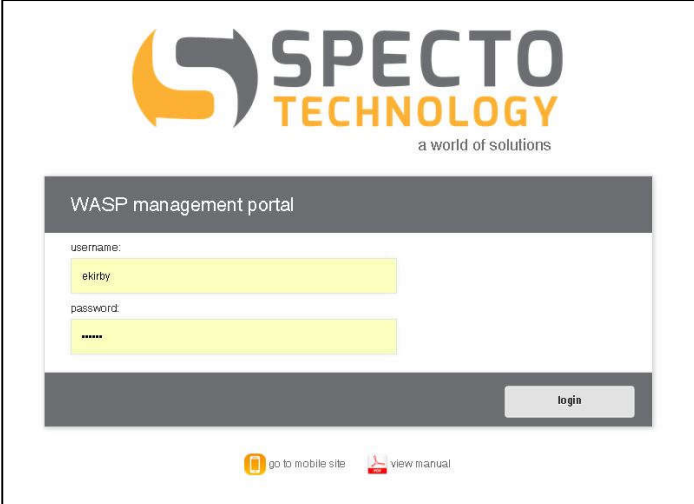

The screenshot shows the login page for the WASP Management Portal. At the top is the Specto Technology logo with the tagline "a world of solutions". Below the logo is a dark grey header bar with the text "WASP management portal". The main content area contains a login form with two input fields: "username:" with the value "ekirby" and "password:" with masked characters "*****". A "login" button is positioned to the right of the password field. At the bottom of the page, there are two links: "go to mobile site" with a mobile phone icon and "view manual" with a document icon.

Log into the WASP Management Portal using the username and password provided to you by Specto Technology.


The web portal comprises of two different sections:

- **Configuration** site (Section 8.1)
- **Data Display** site (Section 8.2)

Further details are provided in the following Sections.

8.1 Configuration Site

You may access the various features of the Configuration Site by clicking on the menu items across the top (Sites, Groups, Users, Map View, Settings, Export, Clients). See example screen shot below.

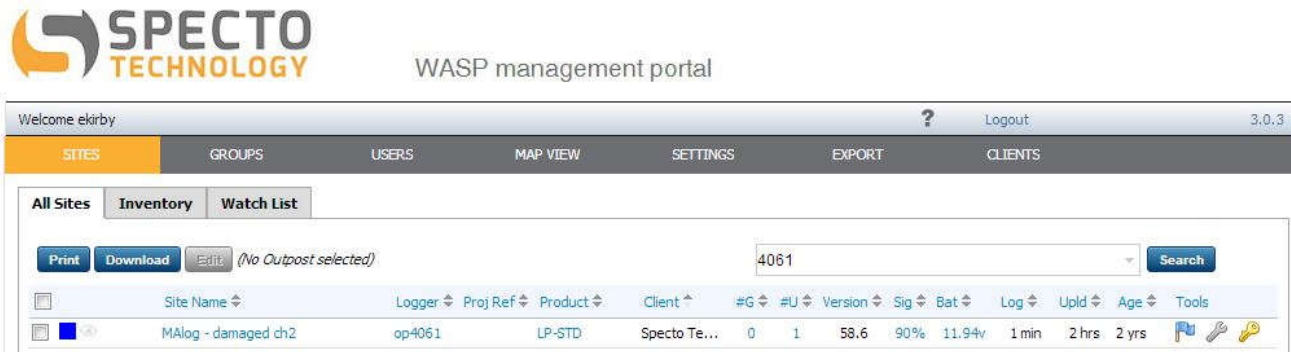

8.1.1 "SITES" Tab



After logging into the WASP management portal (as a Site Administrator or Client), a screen similar to the one shown below will appear:




The term "Site" refers to a WASP datalogger. All WASPs associated with a user's account are listed on under this tab. By default, only active WASPs appear in the Site Name column. You may view Not Installed or Deactivated WASPs associated with your account by clicking the "[Click here to show all](#)" link (shown above in the red circle).

❖ "Site Name" & "Logger ID" columns

Clicking on either field will bring up a window (shown below) where you may view/edit various features.

- **Status Screen** - View the status of WASP, such as signal strength and battery voltage when it was last connected.
- **Configuration** - Edit the Site Name, Time Zone, Project Reference, Installation Date, Web Template ("OP Site Default" should be used) & Status.
- **Location** - Enter location information.
- **Photos** - Photos may only be uploaded using the mobile web-app.
- **Notes** - Add or edit a note.
- **Billing** - Change the current billing status - deactivate or active (please advise Specto Technology before doing this to ensure that correct changes are applied to your account).

Each time a change is made to the configuration, you must click the green "Save Changes" button for changes to take effect.

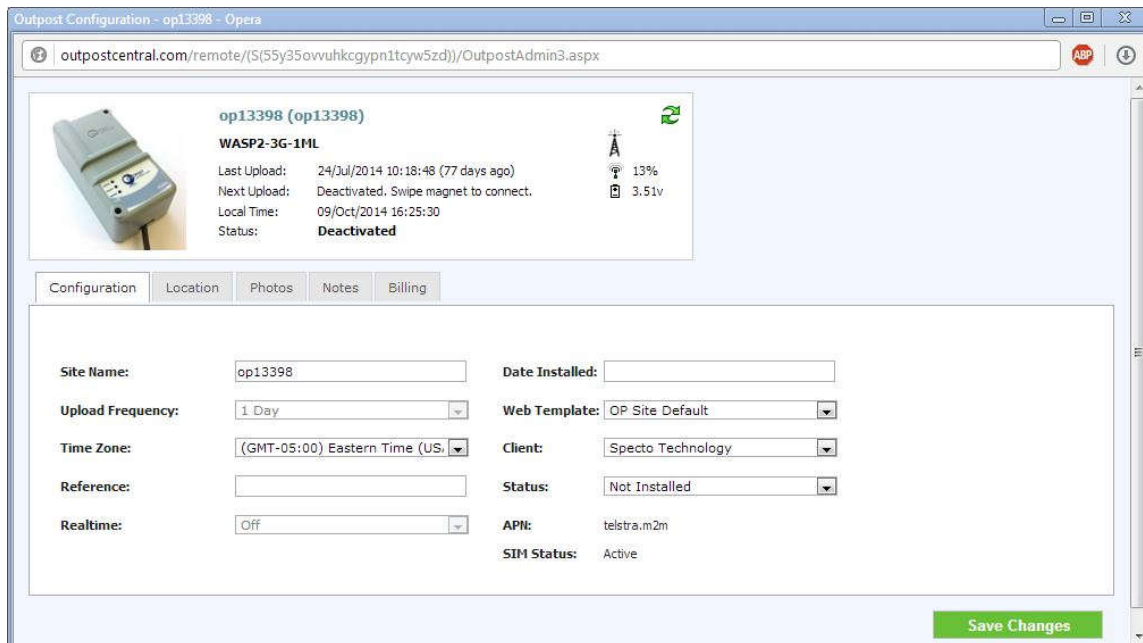

❖ "#G" (Groups) & "#U" (Users) columns

Clicking on either field will allow a user to either view or edit the respective settings.

❖ "Sig" (Signal) & "Bat" (Battery) columns

Clicking on either field will bring up a graph that displays the respective data of the WASP. If the latest data is not immediately visible, simply change the range below the graph to be to an earlier time.



❖ "Log" & "Upld" (Upload) columns


The Log column shows how often the WASP is collecting readings from sensors. Details on how to edit this schedule is given in the following section.

Upload Frequency is set to 1 day by default. Data upload will happen at around midday every day. If you would like to have the daily data uploaded at a different time of the day ("Roster" option), please contact Specto Technology.

Multiple uploads per day may be available; however, the battery life will be affected. Please contact Specto Technology if you would like to change the upload frequency (maximum of twice per day).

❖ "Tools" column

-  **View Events** - click on the blue flag to view a log of events from the WASP, including sensor readings and communication attempts.
-  **Config Sensors** - click on the grey wrench to change the configuration of the sensors being read by the WASP. Each Analogue (4-20mA or thermistor) sensor has unique configuration settings, these may be edited by clicking on the Sensor name.
Editable fields include the sensor name, stabilization time, logging frequency, alarms and scripts to calculate engineering units (more detailed information is given in the following section).

Each time a change is made, you must click  to confirm changes.

- 
Login - click on the golden key to login to the “Data Display” area of the website. This allows you to view and edit any plots, images and tables associated with the WASP. See section 8.2 for details.

8.1.2 “CONFIG SENSORS” - DETAILED INSTRUCTIONS


Native Inputs (Analogue, 4-20mA or Temp/Thermistor), System (Batt, Ontime, Pic, Sig)

Input Settings – the name of the input (or channel) may be edited here. The “SCADA Tag ID” field may be ignored.

Calibration (mA sensors) – These sensors use a “Linear” calculation. The only fields that may require changing are the Stabilization Time and Unit Label. Generally 1-second is an acceptable stabilization time but this may vary depending on the type of sensor used. The below table may be used as a reference.

Sensor Type	Sensor Manufacturer	Stabilization Time (seconds)
Piezometer	itmsoil	1
Piezometer	Sisgeo	1
Tiltmeter	Sisgeo	1
Crackmeter	Sisgeo	1
Crackmeter	Celesco	1

We suggest that you set the Unit Label as “Other” and type in “mA” as any calibration to engineering units of the data will occur in the Calculated Input window (more information given in following section). A screen shot of an example Calibration configuration for a mA sensor is shown below:

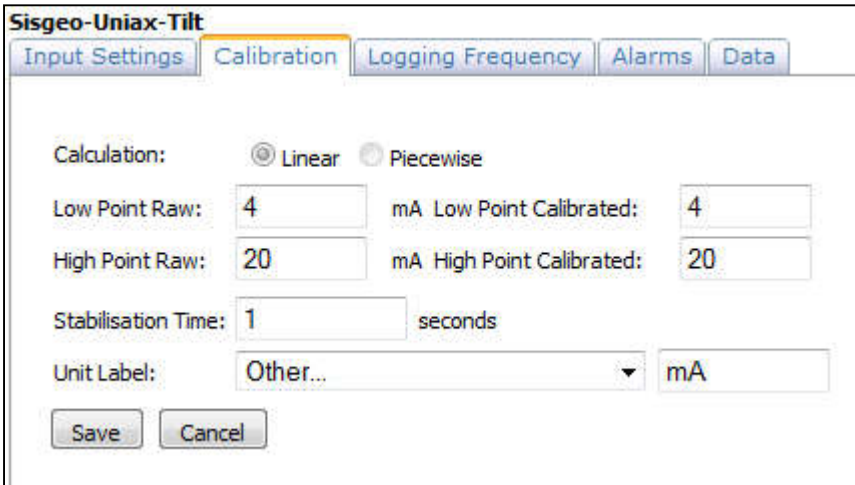

Calibration (thermistors) – These sensors use a “Piecewise” calculation. All fields are pre-filled and do not require further editing.

A screen shot of an example Calibration configuration for a thermistor sensor is shown below:

Temperature

Input Settings | **Calibration** | Logging Frequency | Alarms | Data

Calculation: Linear Piecewise

Piecewise Configuration:

```
8998.073844,-10;7327.155409,-5;5966.522093,0;4858.554773,5;3956.334045,10;3221.653312,15;2623.400841,20;2136.242266,25;1739.547746,30;1416.518346,35;1153.474648,40;939.2774668,45;764.8561337,50;622.8243794,55;507.1675449,60;412.9878776,65;336.2971247,70
```

Stabilisation Time: seconds

Unit Label:

8998.073844,-10;7327.155409,-5;5966.522093,0;4858.554773,5;3956.334045,10;3221.653312,15;2623.400841,20;2136.242266,25;1739.547746,30;1416.518346,35;1153.474648,40;939.2774668,45;764.8561337,50;622.8243794,55;507.1675449,60;412.9878776,65;336.2971247,70

Logging Frequency – the WASP can log data as fast as every minute, and as slow as once per day. The WASP has a “ring” type memory that can store approximately 1350 readings (2-weeks of 15-minute readings for a single channel) before the oldest readings are overwritten. Please note that changing the reading frequency will affect battery life accordingly.

Alarms – alert messages may be sent via SMS or email if a reading satisfies a given condition. To add an alarm, click the “Add” button, from the Alarm Type drop down list, select an option (“High/Low” is the most common for geotechnical and structural applications since you may be notified if readings are either above or below a predetermined value). Click “Next”.

Reset Type – Time

If this option is selected, the WASP will call in at the regularly scheduled time. As soon as the regularly scheduled upload is completed and the condition met, an email or SMS will be sent to the preconfigured recipients. Time based selection is used to prevent alarm from being sent repeatedly.

Reset Type – Value (beta) *

If this option is selected, the WASP will initiate a connection to the web if the trigger condition is met. If an email or SMS recipient has been configured, they will also receive a message for the triggered alert. The WASP will not initiate another connection unless the reset value condition is met or it is at the regular scheduled connection time. The WASP can initiate multiple connections if connection conditions are reset and triggered multiple times prior to a scheduled connection time.

**Please note that only WASPs with firmware versions 305.01 and later have the ability for the WASP to call in immediately if an Alarm is triggered.*

Recipient List – a recipient can only be added from the “GROUP” tab, within the “Alarm Roster” tab.

SMS Recipients - If SMS delivery is used ensure the number includes the country code, i.e. in the USA, a “1” must be present in front of any US phone number. e.g. 16467707602

Once all fields are completed as desired, click the “Finish” (or “Update” if making changes to an existing alarm) button.

Screen shots showing two examples of Alarm configurations are shown below:

Sisgeo-Uniiax-Tilt

Input Settings | Calibration | Logging Frequency | **Alarms** | Data

High/Low Alarm Conditions & Recipients

Condition: Send alarm when Sisgeo-Uniiax-Tilt measures **below** mA (not a rate) in a single logging interval.

Reset Type: **Time**

Do not send again for

Recipient List: **--- Not Selected ---** [Manage Lists](#)

SMS Recipients: (comma separated list)

Email Recipients: (comma separated list)

Alarm Message:

Disabled:

Analogue 1

Input Settings | Calibration | Logging Frequency | **Alarms** | Data

High/Low Alarm Conditions & Recipients

Condition: Send alarm if Analogue 1 measures **above** mA (not a rate) in a single logging interval.

Reset Type: **Value (beta)**

Do not send again until the reading has first fallen below mA (not a rate)

Recipient List: **--- Not Selected ---** [Manage Lists](#)

SMS Recipients: (Comma separated list. Numbers require country code)

Email Recipients: (Comma separated list)

Alarm Message:

Disabled:

 
Data – may be imported, exported, deleted or edited. Data values shown in the columns on the left correspond to the values shown in the graph to the right. If no data is visible (or you would like to configure which data is

shown), you will need to change the From/To time period below the graph by either using the calendar after clicking on the date or by using the arrows below the dates.


To edit data values, click on the value to be edited and type in the new value. Be aware that this is a permanent change of data and is not recommended unless you are sure the change is required. Only clients with administrator access may delete or edit data.

Expander Modules – Add a Tiltmeter

Click Add...

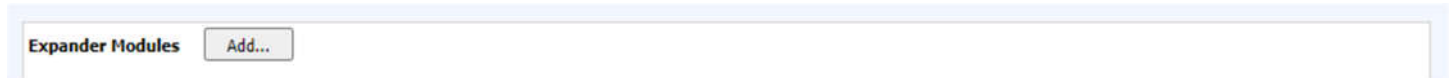


Choose the Expander Module model number from the dropdown and select the SDI Address written on the back on the expander and click Ok

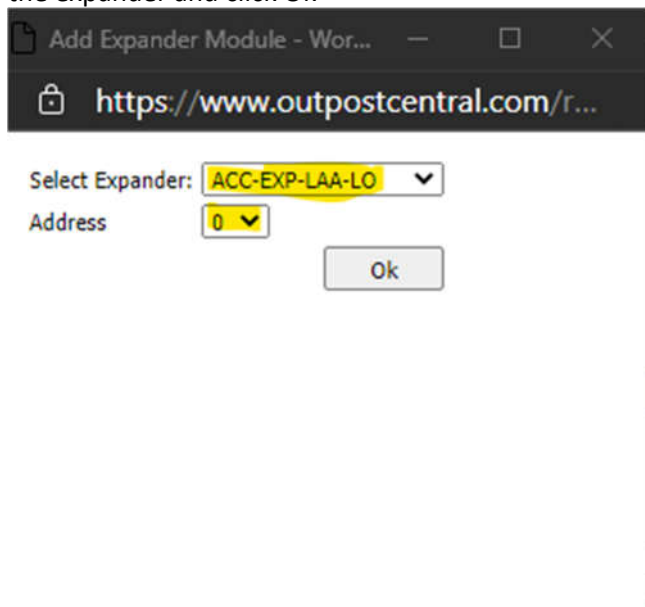

Use the following table to match the expander model to the dropdown list options:

Expander model number	Outpost Name
ACC-EXP-2MO3A	ACC-EXP-3M2A
ACC-EXP-LAAO	ACC-EXP-LAA-LO
ACC-EXP-MO2V	ACC-EXP-M2V

You can then rename the wire color or pin assignments according to your sensor type. For a SISGEO tiltmeter use the below names and settings*.

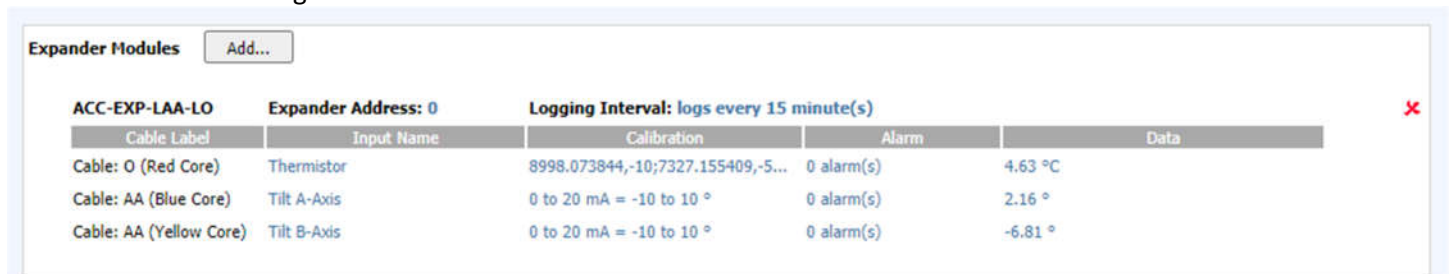

ACC-EXP-LAA-LO		Expander Address: 0	Logging Interval: logs every 15 minute(s)		
Cable Label	Input Name	Calibration	Alarm	Data	
Cable: O (Red Core)	Thermistor	8998.073844,-10;7327.155409,-5...	0 alarm(s)	4.63 °C	
Cable: AA (Blue Core)	Tilt A-Axis	0 to 20 mA = -10 to 10 °	0 alarm(s)	2.16 °	
Cable: AA (Yellow Core)	Tilt B-Axis	0 to 20 mA = -10 to 10 °	0 alarm(s)	-6.81 °	


*See calibrations section for piecewise thermistor calibration.

Sensors – Add a Vaisala WXT536


Click on Add sensor

Sensors							Add sensor
#1 Weather transmitter - WXT536							Data Sheet ✖
PIC SDI12 Ultra	#1 Precipitation	addr=1:pos=3:mc=M:stab=2000	logs every 15 minute(s)	n/a	n/a	Child Inputs	
PIC SDI12 Ultra	#1 Pressure - Temperature - Hu...	addr=1:pos=2:mc=M:stab=2000	logs every 15 minute(s)	n/a	n/a	Child Inputs	
PIC SDI12 Ultra	#1 Wind	addr=1:pos=1:mc=M:stab=2000	logs every 15 minute(s)	n/a	n/a	Child Inputs	
ACC-EXP-MAA-MO - SDI-12 analogue module							Data Sheet ✖
Calculated Input V2	#2 *CI Resistance	'0 to 10 kΩ = 0 to 10 kΩ 'To ...	n/a	0 alarm(s)	3845.3 Ω		
Calculated Input V2	#2 *CI 4-20 mA (1)	'4 to 20 mA = 4 to 20 mA 'To ...	n/a	0 alarm(s)	0.01 mA		
Calculated Input V2	#2 *CI 4-20 mA (2)	'4 to 20 mA = 4 to 20 mA 'To ...	n/a	0 alarm(s)	11.98 mA		
PIC SDI12 Ultra	#2 ACC-EXP-MAA-MO	addr=0:pos=5:mc=C:stab=1000	logs every 30 minute(s)	n/a	n/a	Child Inputs	

Search for "Vaisala" and click "Use"

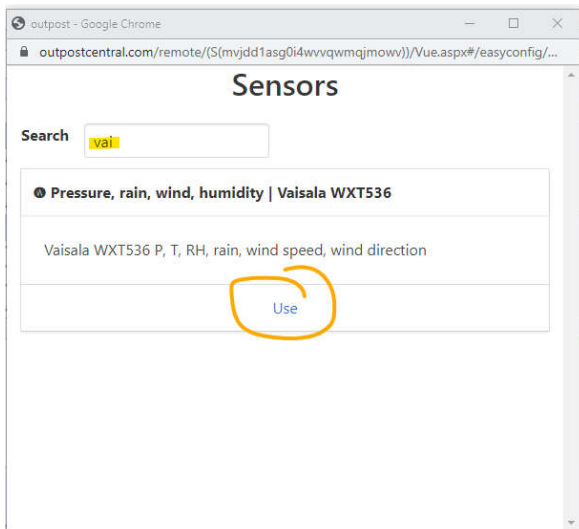

Make sure to match the SDI Address you set on the WXT536 and Choose the logging interval you desire. Then click "Add Sensor to Site"

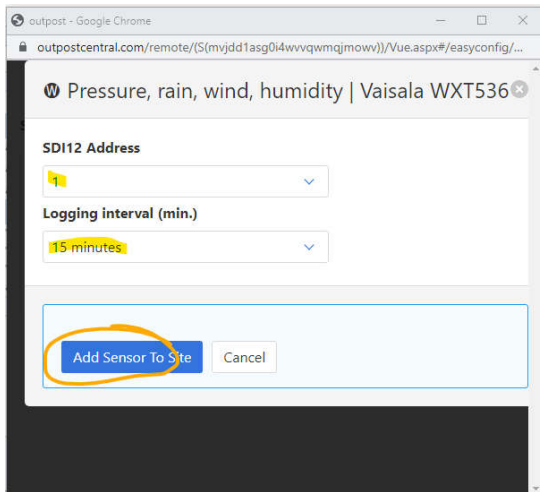

Now Press test once to sync the settings from Outpost Central, then a second time to collect some readings. Click on "Child Inputs" to see the readings and confirm its working.

Sensors							Add sensor
#1 Weather transmitter - WXT536							Data Sheet
PIC SDI12 Ultra	#1 Precipitation	addr=1:pos=3:mc=M:stab=2000	logs every 15 minute(s)	n/a	n/a	Child Inputs	
PIC SDI12 Ultra	#1 Pressure - Temperature - Hu...	addr=1:pos=2:mc=M:stab=2000	logs every 15 minute(s)	n/a	n/a	Child Inputs	
PIC SDI12 Ultra	#1 Wind	addr=1:pos=1:mc=M:stab=2000	logs every 15 minute(s)	n/a	n/a	Child Inputs	

https://www.outpostcentral.com/remote/(S(mvjdd1asg0i4wvqwqmjmowv))/ConfigChildInputs.aspx?InputID=1825016 - Google Chrome

outpostcentral.com/remote/(S(mvjdd1asg0i4wvqwqmjmowv))/ConfigChildInputs.aspx?InputID=1825016

#1 Pressure - Temperature - Humidity					
#1 Air temperature	Channel: 0	n/a	0 alarm(s)	24.5 °C	
#1 Barometric pressure	Channel: 2	n/a	0 alarm(s)	1012 hPa	
#1 Relative humidity	Channel: 1	n/a	0 alarm(s)	42.4 %	

Calculated Inputs (virtual sensors)

Input Settings – as for Native Inputs (above).

Calibration – this feature allows you to use a VB.NET script to calculate and define engineering units. A standard template of the VB.NET script relating to the sensor you are using will be provided upon request.

To define the engineering unit label, click the blue link below the script box ([click to change unit](#)) and enter the desired unit, i.e. mm/m, kPa, inches, etc.


Logging Frequency – not applicable.

Alarms – as for Native Inputs (above).

Data – as for Native Inputs (above).

8.1.3 “GROUPS” Tab

Groups may be created to manage access to more than one user for the data presentation area of the website. The following screen shot shows the view after clicking the “GROUPS” tab.

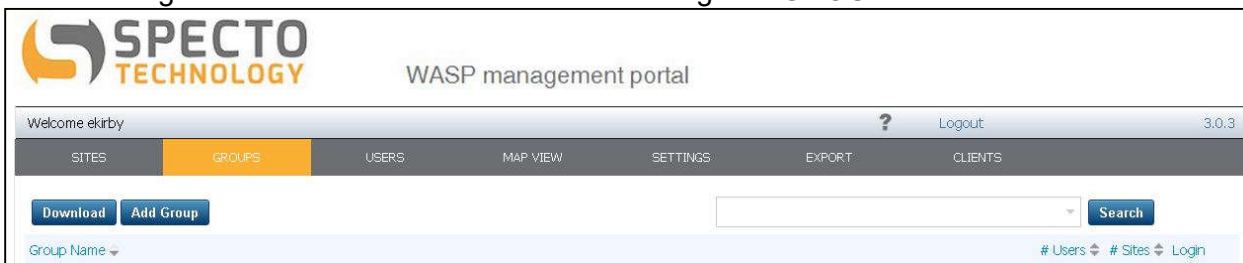

WASP management portal

Welcome ekirby ? Logout 3.0.3

SITES **GROUPS** USERS MAP VIEW SETTINGS EXPORT CLIENTS

Download Add Group Search

Group Name # Users # Sites Login

Once a group is added by entering a “New Group Name”, users may select which WASPs (Sites) will be visible to the group.

8.1.4 “USERS” Tab

Users may be created to allow others access to WASP data and settings. The following screen shot shows the view after clicking the “USERS” tab.



Users may be one of 4 types (Site, Group, Client or Custom).

- **Site** – a user may access a single WASP (site).
- **Group** – a user may view data for a predefined group of WASPs (sites).
- **Client** – a user may access all WASPs (sites) assigned to your account.

Users may be one of two Roles (User or Admin).


- **User** – may view but not edit features, depending on the Type.
- **Admin** – may edit configuration features, depending on the Type.

You may also view login statistics of each user to see each user’s activity on the website. The below table shows access levels for each account type and role.

		Configuration Page		Graph Page	
		View	Edit	View	Edit
Site	User			•	
	Admin	•	•	•	•
Group	User			•	
	Admin			•	•
Client	User	•		•	
	Admin	•	•	•	•

8.1.5 “MAP VIEW” Tab

The following screen shot shows the view after clicking the “MAP VIEW” tab.

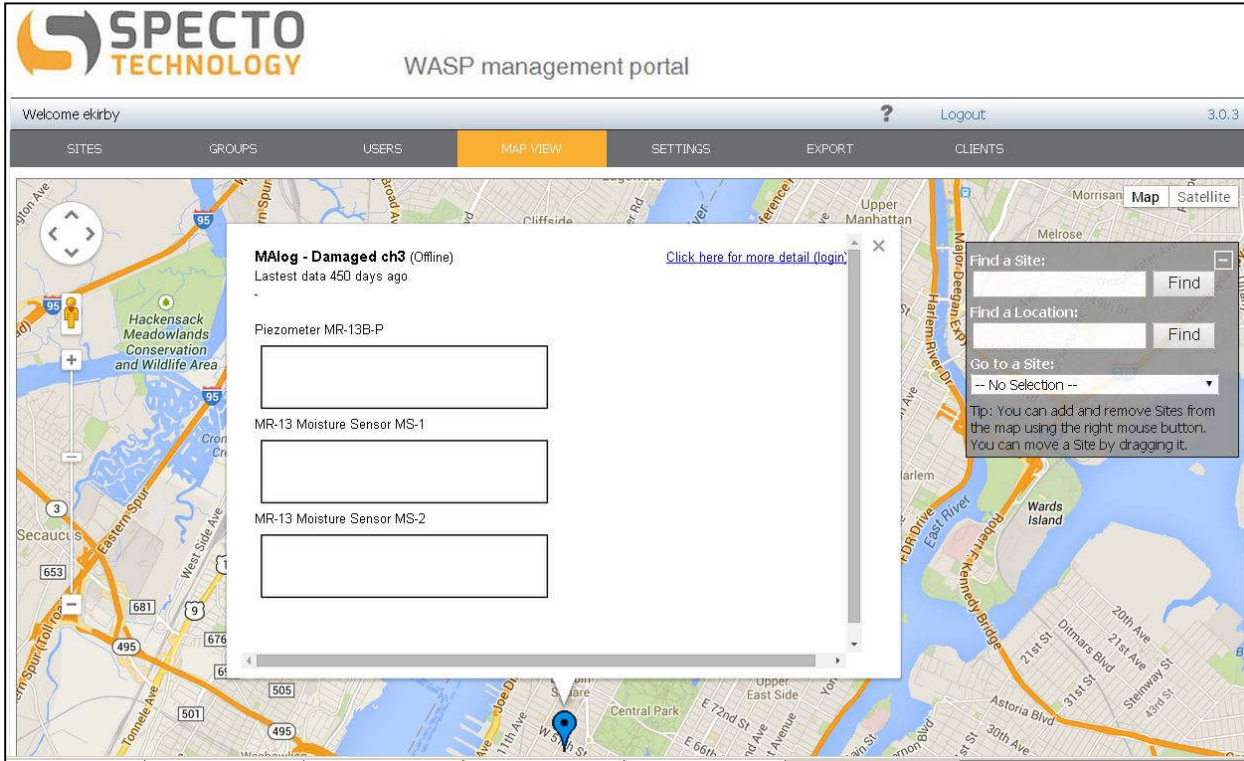

Right click on the map to add a WASP (site).


To move a WASP (site) that is already on the map, simply drag and drop it to a new location using your left mouse button.

You may go directly to a particular WASP (site) by selecting it from the drop down list, in the top right corner.

8.1.6 “SETTINGS” Tab

General account settings may be adjusted here, including location, time zone and date/time format. A list of email addresses may be entered to alert users when WASPs are offline.

The following screen shot shows the view after clicking the “SETTINGS” tab.

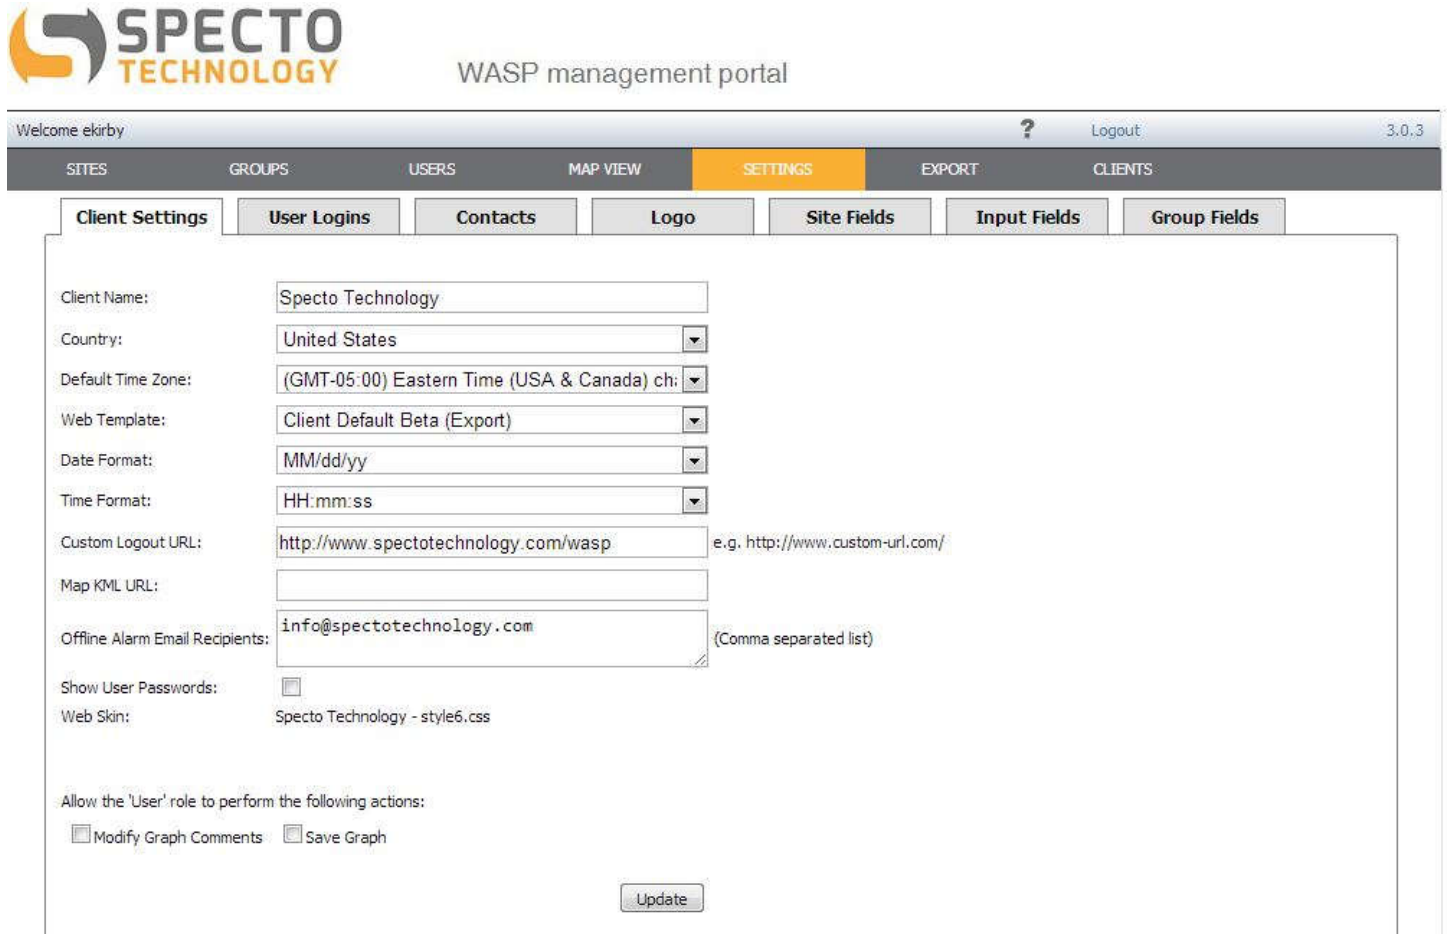

The screenshot shows the 'SETTINGS' tab selected in the 'WASP management portal'. The page includes a navigation bar with tabs for SITES, GROUPS, USERS, MAP VIEW, SETTINGS (highlighted), EXPORT, and CLIENTS. Below the navigation bar are sub-tabs for Client Settings, User Logins, Contacts, Logo, Site Fields, Input Fields, and Group Fields. The 'Client Settings' sub-tab is active, displaying a form with the following fields:

- Client Name: Specto Technology
- Country: United States
- Default Time Zone: (GMT-05:00) Eastern Time (USA & Canada) ch:
- Web Template: Client Default Beta (Export)
- Date Format: MM/dd/yy
- Time Format: HH:mm:ss
- Custom Logout URL: http://www.spectotechnology.com/wasp (e.g. http://www.custom-url.com/)
- Map KML URL: (empty)
- Offline Alarm Email Recipients: info@spectotechnology.com (Comma separated list)
- Show User Passwords:
- Web Skin: Specto Technology - style6.css


At the bottom of the form, there is a section for permissions: "Allow the 'User' role to perform the following actions:" with checkboxes for "Modify Graph Comments" and "Save Graph". An "Update" button is located at the bottom center of the form.


8.2 Data Display Site


You may access the various functions of the Data Display site by clicking on the menu items across the top of the page. Details of each link are given below:


A drop down list shows all WASPs available to a user. Selecting a WASP will bring up the pre-defined plots for that logger.


 Clicking the Map icon opens a new window with a Google Map, the user may select a WASP to view data.


 Clicking the Site Configuration icon opens a new window that allows a user to view/change the general WASP settings.


 Clicking the Sensor Configuration icon opens a new window that allows a user to view/change the sensor settings for the WASP.

 Clicking the Download Data icon opens a new window that allows a user to download data from any of the WASP input in .csv or text format.



 Clicking the Battery Bar icon opens a new window that allows a user to view the WASP battery levels for the past week (please note, the icon bars do not change color according to battery level).

 Clicking the Signal Bar icon opens a new window that allows a user to view the WASP signal levels for the past week.

 Clicking the WASP Status icon opens a window showing log of recent functions performed by the WASP.

 Clicking the question mark icon opens a new tab containing an interactive Help menu.

Details of each Tab are given below:

-  – The Graphs tab shows the predefined plots and data statistics for the WASP you are viewing.
-  - The Reports tab shows the predefined reports for the WASP.

See example screen shot of a Data Display Site below.



8.2.1 “GRAPHS” Tab



Customized graphs showing sensor data may be viewed and configured here (depending on the user’s access level).

Clicking on the Image icon allows users to set an image to be associated with a graph.

Clicking on the graph allows users to configure graphs by adding data series, customizing the Facts & Figures, etc. any change made to a graph must be saved by clicking the disk icon below the graph. Once the disk icon is clicked, you may determine the duration of data that is shown.

New graphs may be added by clicking the “Add row...” link. Page and graph layout may be edited by clicking on the cog icon (⚙️).

Utilizing the Help feature of the website will assist with further details.

8.2.2 “REPORTS” Tab



Customized reports showing sensor data may be viewed and configured here (depending on the user’s access level).

A new report may be created by clicking the “Add Report” link, in the top right corner of the page. To edit an existing report, click on the report and configure the desired details shown in the window that subsequently opens. Reports may be automatically generated and emailed to a predetermined list of recipients, as desired.

9 Battery Life


The battery life of the WASP is dependent on the following factors:

- Strength of cellular signal
- Ambient temperature
- Sensor stabilization time - how long the sensor must be powered up before taking a reading
- Frequency of reading
- Frequency of data upload

10 Retired Sensors Wiring

10.1 Sisgeo's MEMS Tiltmeter

Sisgeo Tiltmeters require a minimum of 18V excitation. To use with a new series WASP that only excites at 12V, a 12V to 18-24V converter is required. Such as in the example below.

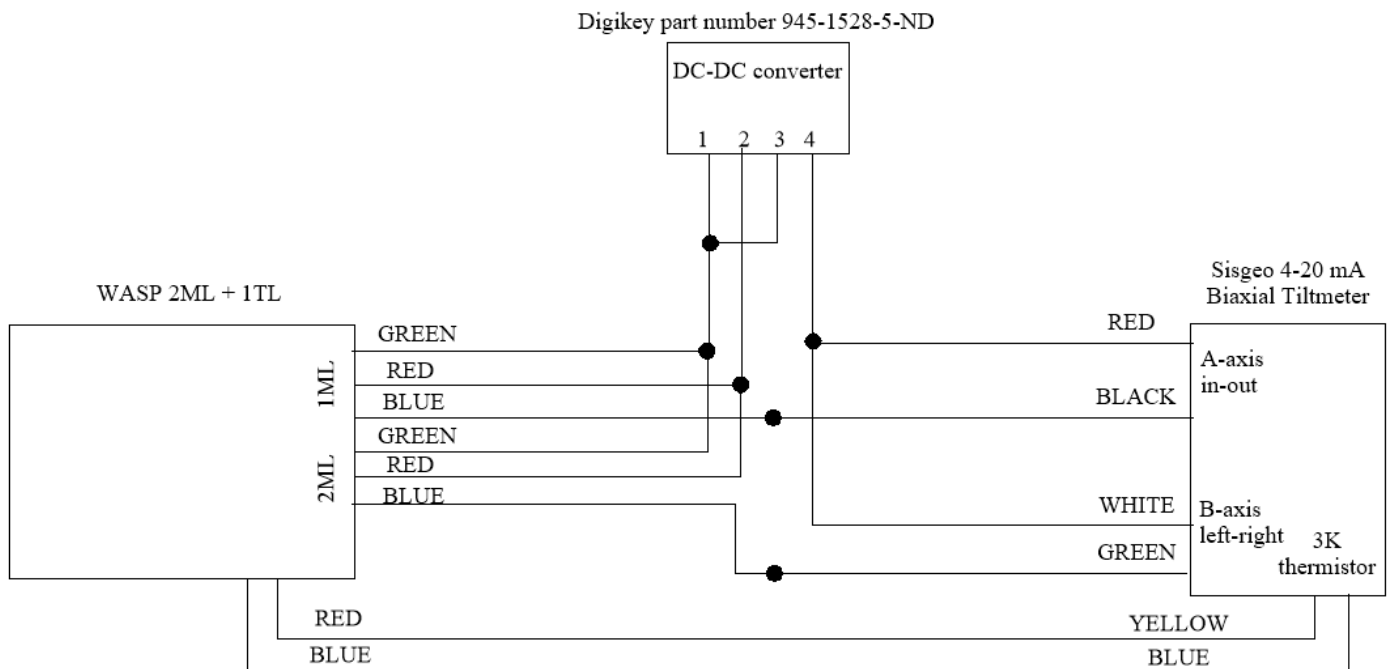

For legacy wiring use:

- **Uniaxial Tiltmeter**

Terminal Name	Color of Wire	
	WASP	MEMS Tilt Meter
Power	Red	Red
Return	Blue	Black
Shield	Green	-
Thermistor	Red	White
Thermistor	Blue	Green

- **Biaxial Tiltmeter**

Terminal Name	Color of Wire	
	WASP	MEMS Tilt Meter
Power (A in-out)	Red (1)	Red
Return (A in-out)	Blue (1)	Black
Power (B side-side)	Red (2)	White
Return (B side-side)	Blue (2)	Green
Thermistor	Red	Yellow
Thermistor	Blue	Blue

10.2 Sisgeo's Electrical Crackmeter

Terminal Name	Color of Wire	
	WASP	Potentiometer with mA output
Power	Red	Red
Return	Blue	Black
Shield	Green	-

10.3 Soil Instrument's Solid State Piezometer

Terminal Name	Color of Wire	
	WASP	Solid State 4-20mA Piezometer
Power	Pin 1	Red
Return	Pin 3	Black
Shield/Screen	Pin 4	Green

10.4 Specto 2GIG Biaxial MEMS Tiltmeter

Expander: ACC-EXP-LAAO

Terminal Name	Color of Wire	
	WASP – ACC-EXP-LAAO	MEMS Tilt Meter
Power (X)	Pin 1 (AA)	Red (TILT)
Return (X)	Pin 3 (AA)	Green (TILT)
Ground (X)	Pin 4 (AA)	Black (TILT)
Power (Y)	Pin 1 (AA)	Red (TILT)
Return (Y)	Pin 2 (AA)	White (TILT)
Ground (Y)	Pin 4 (AA)	Black (TILT)
Thermistor	Pin 3 (O)	Red (TEMP)
Thermistor	Pin 4 (O)	Black (TEMP)